


d


e

STEP 3 - INSTALLING THE CAMERA - DIRECT INSTALL

- 1. Remove the rubber plugs from the camera's mounting holes (2) and attach the camera to the mounting surface using the included anchors and screws (3).
- When mounting the camera, be sure the mounting screws are tightened all the way to the bottom panning plate. Keeping the screw not fully engaged will prevent the panning plate mechanism from working.

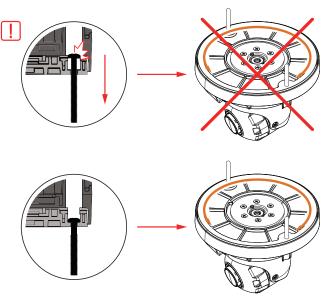


- 3. Adjust the camera's tilt and angle by loosening the tilt screw at the base of the camera module (see STEP 4).4. Assemble the dome cover over the camera body. Align the dome and bottom case to match the
- position of the microphone output's hole.
 NOTE: Once the dome is attached to the base of the camera, the panning plate is locked into place and cannot be adjusted.
- 5. Remove the protective film from the dome. Softly wipe the dome with lens tissue or a microfiber cloth to remove any dust or smudges left from the installation process.

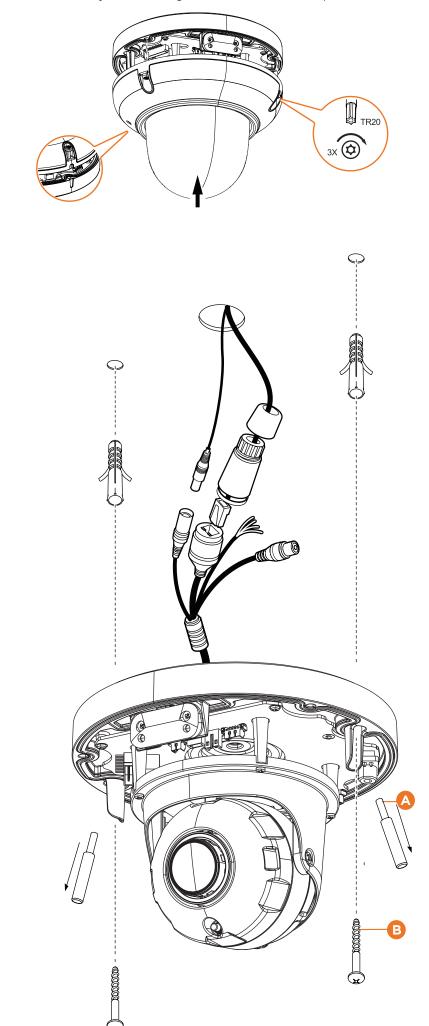


STEP 3 - INSTALLING THE CAMERA - CABLE GUIDE PLATE INSTALL

1. Remove the rubber plugs from the camera's mounting holes (A) and attach the camera to the mounting surface using the included anchors and screws (B).

 Use four (4) mounting screws to mount the cable guide plate to the mounting surface.
 Use two (2) mounting screws to secure the camera to the cable guide plate and mounting surface.





4. When mounting the camera, be sure the mounting screws are tightened all the way to the bottom panning plate. Keeping the screw not fully engaged will prevent the panning plate mechanism from working.

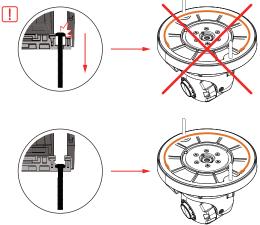


- 5. Adjust the camera's tilt and angle by loosening the tilt screw at the base of the camera module (see STEP 4).6. Assemble the dome cover over the camera body. Align the dome and bottom case to match
- the position of the microphone output's hole.

NOTE: Once the dome is attached to the base of the camera, the panning plate is locked into place and cannot be adjusted.

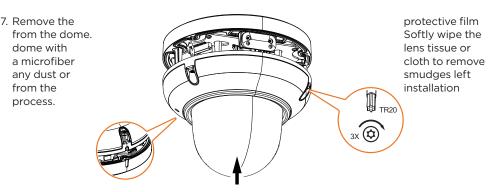

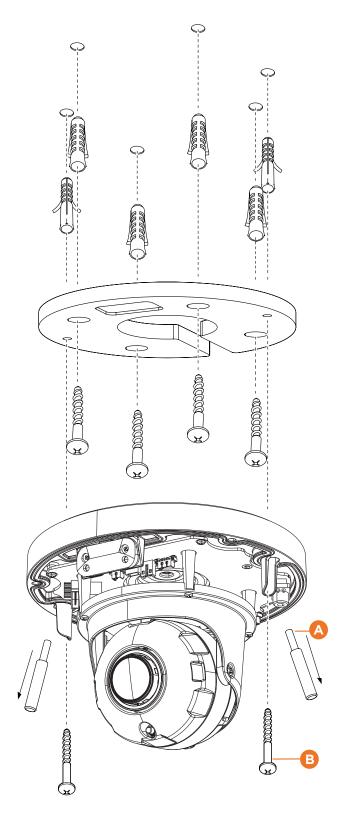


STEP 4 - ADJUSTING THE CAMERA'S ANGLE
The camera's lens module can rotate 360°. The camera's lens module can tilt 70°. The camera can pan 355° using the panning plate at the base of the camera.
NOTE: Once the dome is attached to the base of the camera, the panning plate is locked into place and cannot be adjusted.

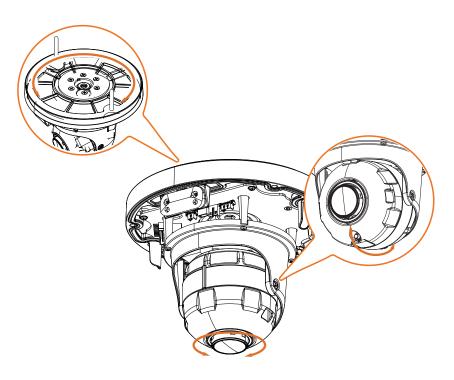


STEP 5 – CABLING

Connect power, network and external devices to the camera.

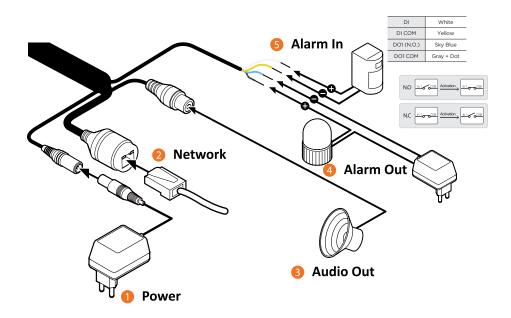

STEP 6 - MANAGING THE SD CARD (OPTIONAL)

- 1. Locate the SD card slot at the base of the camera module.
 - Insert a class 10 SD/SDHC/SDXC card into the SD card slot by pressing the SD card until it clicks.
- Press the card inward until it clicks to release from the card slot, and then pull it out from the slot.

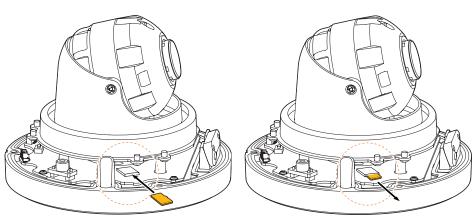

NOTE: Maximum SD Card size supported: Up to 1TB micro SD / FAT32. When inserting the SD card into the card slot, the SD card's contacts should be facing downward, as shown in the diagram.

STEP 7 – DW[®] IP FINDER™

- Download and install the DW IP Finder from the DW website at <u>http://www.digital-watchdog.com.</u>
- Open the DW IP Finder and click 'Scan Devices' to find the camera on the network.
 A password must be set when connecting to the camera
 - for the first time.
 - a. Check the box next to the camera.
 - b. Click "Bulk Password Assign" on the left.
 - c. Enter admin/admin for the current username and password. Enter a new username and password to the right.
 Passwords must have at least eight (8) characters and at least four
 - (4) combinations of uppercase and lowercase letters, numbers and special characters. Passwords cannot contain the user ID.d. Click "change" to apply all changes.


STEP 8 - WEB VIEWER

 


The GUI display may differ depending on the camera model.

- 1. Find the camera using the DW IP Finder.
- 2. Double-click on the camera's view in the results table.
- 3. Press the 'View Camera Website'.
- 4. Enter the camera's username and password you set up in the DW IP Finder.

If you did not set up a new username and password, a message will direct you to set up a new password for the camera to view the video.

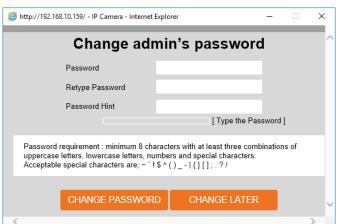





Tel: +1 (866) 446-3595 / (813) 888-9555

Technical Support Hours: 9:00AM – 8:00PM EST, Monday through Friday

Copyright © Digital Watchdog. All rights reserved. Specifications and pricing are subject to change without notice.